

SPECIFICATIONS

Model No.	CD-TYQ40	
Capacity	4.0 liters	
Rating	AC 220-230V 50/60Hz	
Electric Consumption	640-700W	
Average Power Consumption during Keep Warm	98°C	Approx. 24 W
	90°C	Approx. 21 W
	80°C	Approx. 17 W
	70°C	Approx. 13 W
Length of the Power Cord	0.75 m	
External Dimensions (approx. cm)	21 (W) x 28.5 (D) x 35 (H)	
Weight (including the Power Cord)	Approx. 3.2 kg	

- The average Keep Warm electric power consumption is for one hour, provided that the Inner Container is full and the room temperature is approximately 23°C.
- The height refers to the product when the handle is down.
- In high altitudes or severely cold areas, the product may not perform as specified. Avoid using the product in such areas or in other extreme conditions.
- This product is not suitable for use in countries or regions with different power supply voltages or frequencies.

WARNING - THIS APPLIANCE MUST BE EARTHED IMPORTANT


The wires in this mains lead are coloured in accordance with the following code:
Green-and-yellow:Earth Brown:Live Blue:Neutral

If the colours of the wires in the mains lead of this appliance do not correspond with the coloured markings identifying the terminals in your plug, proceed as follows.

The wire which is coloured green-and-yellow must be connected to the terminal in the plug which is marked with the letter E or by the earth symbol or coloured green or green-and-yellow. The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured BLACK.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured RED.

This appliance must be protected by a 13A fuse if a 13A (BS1363) plug is used or, if any other type of plug is used, by a 10A fuse either in the plug or adaptor or at the distribution board.

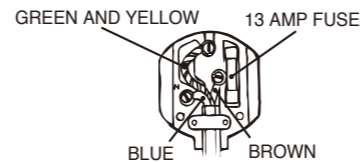

How to change the Fuse


If the Power Plug of your Power Cord (See P.4) is,

A. A type that can be disassembled. Refer to above.

B. A solid molded type that can not be disassembled. Please refer to the following.

1. Open the Fuse Cover of the Power Plug.
2. Replace the Fuse (13A) that is inside with a new Fuse. (Be sure to replace with a 13A Fuse)
3. Fit back the Fuse Cover with the new Fuse to the Power Plug.

Caution Do not connect the Fuse directly to the Power Plug. The Fuse Cover can not be attached.

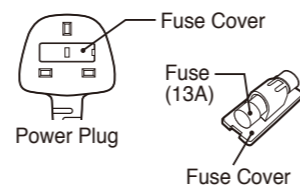

HKG SGP

VE HYBRID ELECTRIC DISPENSING POT OPERATING INSTRUCTIONS

CV-TYQ40

Always follow basic safety precautions when using electrical appliances.
Read all instructions carefully.
Please keep this instruction book on hand for easy reference.

INDEX

BEFORE USE

IMPORTANT SAFEGUARDS	2
PARTS NAMES AND FUNCTIONS	4

HOW TO USE

BOIL MODE	6
DISPENSE HOT WATER	8
DISPOSE WATER	8
AUTOMATIC SHUT-OFF FUNCTION	9
REBOIL MODE	9

USEFUL FUNCTIONS:

HOW TO SET THE KEEP WARM MODE	10
QUICK TEMP MODE	12
ENERGY-SAVING MODE	13
ENERGY-SAVING TIMER FUNCTION	13
CAFÉ DRIP FUNCTION	14
HOW TO CHANGE THE INFORMATION SOUND	14

CLEANING AND MAINTENANCE

CLEANING AND MAINTENANCE	15
• HOW TO REPLACE THE INNER LID GASKET	15
HOW TO CLEAN THE INNER CONTAINER WITH CITRIC ACID	16
REPLACEMENT PARTS	17

BEFORE CALLING FOR SERVICE

Q&A ON PRODUCT USE	17
TROUBLESHOOTING GUIDE	17
SPECIFICATIONS	20

ZOJIRUSHI CORPORATION
OSAKA, JAPAN

©(B)(A)

IMPORTANT SAFEGUARDS

Before use

These WARNINGS and CAUTIONS are intended to protect you and others from personal injury and household damage. To ensure safe operation, please follow carefully.

WARNINGS

Do not modify the product. Only a repair technician may disassemble or repair this unit.

- Attempting to do so may cause fire, electric shock or injury. Make any repair inquiries to the store you purchased the product.

Do not immerse the product in water or splash it with water, and do not put it on a wet surface such as a sink.

- Doing so may cause short circuit or electric shock.

Do not allow liquid to come into contact with the Receptacle or Power Cord.

- Doing so may cause short circuit or electric shock.

Do not plug or unplug the Power Cord if your hands are wet.

- Doing so may cause electric shock or injury.

Do not touch the Steam Vent or bring your hands or face near the Steam Vent.

- Doing so may cause burns or scalding. Take special precautions with children and infants.

Do not cover the Steam Vent with anything such as a dishcloth.

- Hot water may spill out, resulting in scalds. It may also cause deformation or discoloration of the Upper Lid or breakdown of the product.

Do not allow children to use the product unsupervised. Keep it out of the reach of infants.

- Children are at risk of burns, electric shock or injury.

Do not fill over the Maximum Water Level Line.

- Overfilling may cause hot water to spill out, resulting in scalds.

Always remove the Upper Lid before disposing hot water.

- The Upper Lid may fall off and cause hot water to splash, resulting in scalds.

Do not tilt or shake the product or carry in your arms. Do not move it or drain hot water by holding the Upper Lid.

- Doing so may result in scalding by hot water spilling out from the Spout or Steam Vent, even if the Automatic Dispense Lock is on. Always use the handle when carrying.

Do not tilt the product or tip it over.

- Hot water may spill from the Spout or Steam Vent, even if the Automatic Dispense Lock is on.

Do not slam the Upper Lid when closing.

- Hot water may dispense or spill out, resulting in scalds.

Do not use the product if the Power Plug or Power Cord is damaged or if the Power Plug is loosely inserted into the electrical outlet.

- Doing so may cause electric shock, short circuit or fire.

Close the Upper Lid securely.

- Hot water may spill out when the product is overturned, resulting in scalds.

Do not remove the Upper Lid while boiling.

Do not damage the Power Cord.

- Do not bend, pull, twist, fold, or attempt to modify the Power Cord. Do not place it on or near high temperature surfaces or appliances, under heavy items or between objects. A damaged Power Cord can cause fire or electric shock.

Do not use the product as a cooler or place ice inside of it.

- Doing so may cause condensation, resulting in electric shock or breakdown of the product.

Do not allow the end of the Appliance Plug to become soiled with dust or come into contact with any metal objects.

- Doing so may cause electric shock, short circuit or fire.

Do not allow infants or children to put the Appliance Plug in their mouth.

- Doing so may cause electric shock or injury. Take special precautions with children and infants.

Insert the Power Plug completely and securely into the electrical outlet.

- A loosely inserted Power Plug may cause electric shock, short circuit, smoke or fire.

Use only an electrical outlet rated at 10 amperes minimum, and do not plug other devices into the same outlet.

- Plugging other devices into the same outlet may cause the electrical outlet to overheat, resulting in fire.

If the blades or surface of the Power Plug become soiled, wipe them clean.

- A dirty Power Plug may cause fire.

Do not use a power source other than 220-230 V AC.

- Use of any other power supply voltage may cause fire or electric shock.

Do not boil anything other than water.

- Attempting to boil, cook, or heat up the following items may cause bubbling or boiling over, which may cause scalding. Doing so may also cause clogging of the water route or Electric Pump, or scorching or corrosion of the Inner Container.

- Milk, sake, soup, charcoal, tea bags or tea leaves.
- Instant food.
- Food and sauce pouches or foods in plastic bags.

Replace the Inner Lid Gasket if it hardens, changes shape, turns white, or otherwise becomes worn out.

- Hot water may spill out when the product is tilted or tipped over accidentally, and may cause scalding. Steam may also leak out from the gap and cause burns or product failures.

This product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the product by a person responsible for their safety. Children should be supervised to ensure that they do not play with the product.

Stop using immediately if you notice any of the following symptoms indicating a malfunction or breakdown.

- Continued use of the product may cause smoke, fire, electric shocks or injury.
- The Power Plug or Power Cord has become very hot.
- The Power Cord is damaged or the electricity turns on and off when touched.
- The Body is deformed or unusually hot.
- Smoke is arising from the product or there is a burning smell.
- Some parts of the product is cracked, loose or unstable.
- The product emits steam for at least 10 minutes continuously and does not turn to Keep Warm mode.
- Water leaks from the Body.

If any of the above occurs, unplug the product immediately and return to the store where you purchased it for check-ups and/or repairs.

CAUTIONS

Always use caution when opening the Upper Lid and avoid skin contact with steam.

- Loose water or steam may escape upon opening the Upper Lid and cause scalds.

Do not touch hot surfaces during or for a short period of time after use.

- Touching hot surfaces may cause burns. Be especially careful with metal parts such as the Inner Lid and the Inner Container.

Please allow the product to cool down before cleaning.

- Touching hot surfaces may cause burns.

Do not use the product near walls or furniture.

- Steam or heat may damage, discolor or deform walls or furniture.

Do not swivel or move the product while dispensing water.

- Hot water may splash out, resulting in scalds.

Do not place or use the product on unstable surfaces.

- Doing so may cause scalds or injuries.

Do not use on surfaces that are sensitive to heat.

- Doing so may cause fire.

Do not attempt to dispense hot water while it is boiling.

- Hot water can spurt out, resulting in scalds.

Do not use other Power Cords than the one provided. Do not use the Power Cord for other appliances.

Do not use the Power Cord for overseas models.

- Doing so may cause malfunction or fire.

Do not place the product over direct flame (such as a gas stove top), or on top of electric or induction heating (IH) cookers.

- Doing so may cause fire, breakdown or damage of the product.

Unplug the Power Plug from the outlet when the product is not in use.

- Leaving the Power Plug in an outlet may cause the insulation to become damaged, resulting in electric shock, short circuit or fire, or result in injuries or scalds.

Do not touch the Lid Lock when carrying the product.

- Doing so may cause the Upper Lid to open, resulting in injuries or scalds.

Always unplug the product by holding the Power Plug, not by pulling the Power Cord.

- Pulling the Power Cord to unplug the product may cause electric shock, short circuit or fire.

If the Power Cord is damaged, it must be replaced by an appropriate cord or assembly made available by the manufacturer or its service agent.

IMPORTANT

Do not operate the product when it is empty.

- Doing so may burn or damage the product.

Avoid rough handling, dropping or bumping the product.

- Doing so may cause damage or cease operation of the product.

Avoid letting steam make contact with cabinets and walls when using near or under a kitchen shelf.

- Doing so may cause discoloration or deformation.

Allow the product to dry completely when storing the product for a long period of time where it may freeze.

- If water left inside freeze, it may cause breakdown or malfunction.

Avoid using the product near a radio, TV, computer, etc.

- The product may cause interference with certain electronics.

Do not drag the product over any surface while attempting to move.

- Doing so may cause damage to surfaces such as countertops.

Do not allow hot water to come into contact with the Control Panel or the Water Level Gauge.

- Doing so may cause breakdown of the product.

Do not use the product where its steam may come into contact with other electrical appliances.


- The steam may cause fire, malfunction, discoloration or deformation to other electrical appliances.

This appliance is intended to be used in household and similar applications such as;

- Staff kitchen areas in shops, offices and other working environments;
- Environments comparable to residential living rooms and kitchens;
- ※ This appliance is not intended for use by many unspecified people for a long period of time.


● The illustrations used in these Operating Instructions may vary from the actual product you have purchased.

PARTS NAMES AND FUNCTIONS

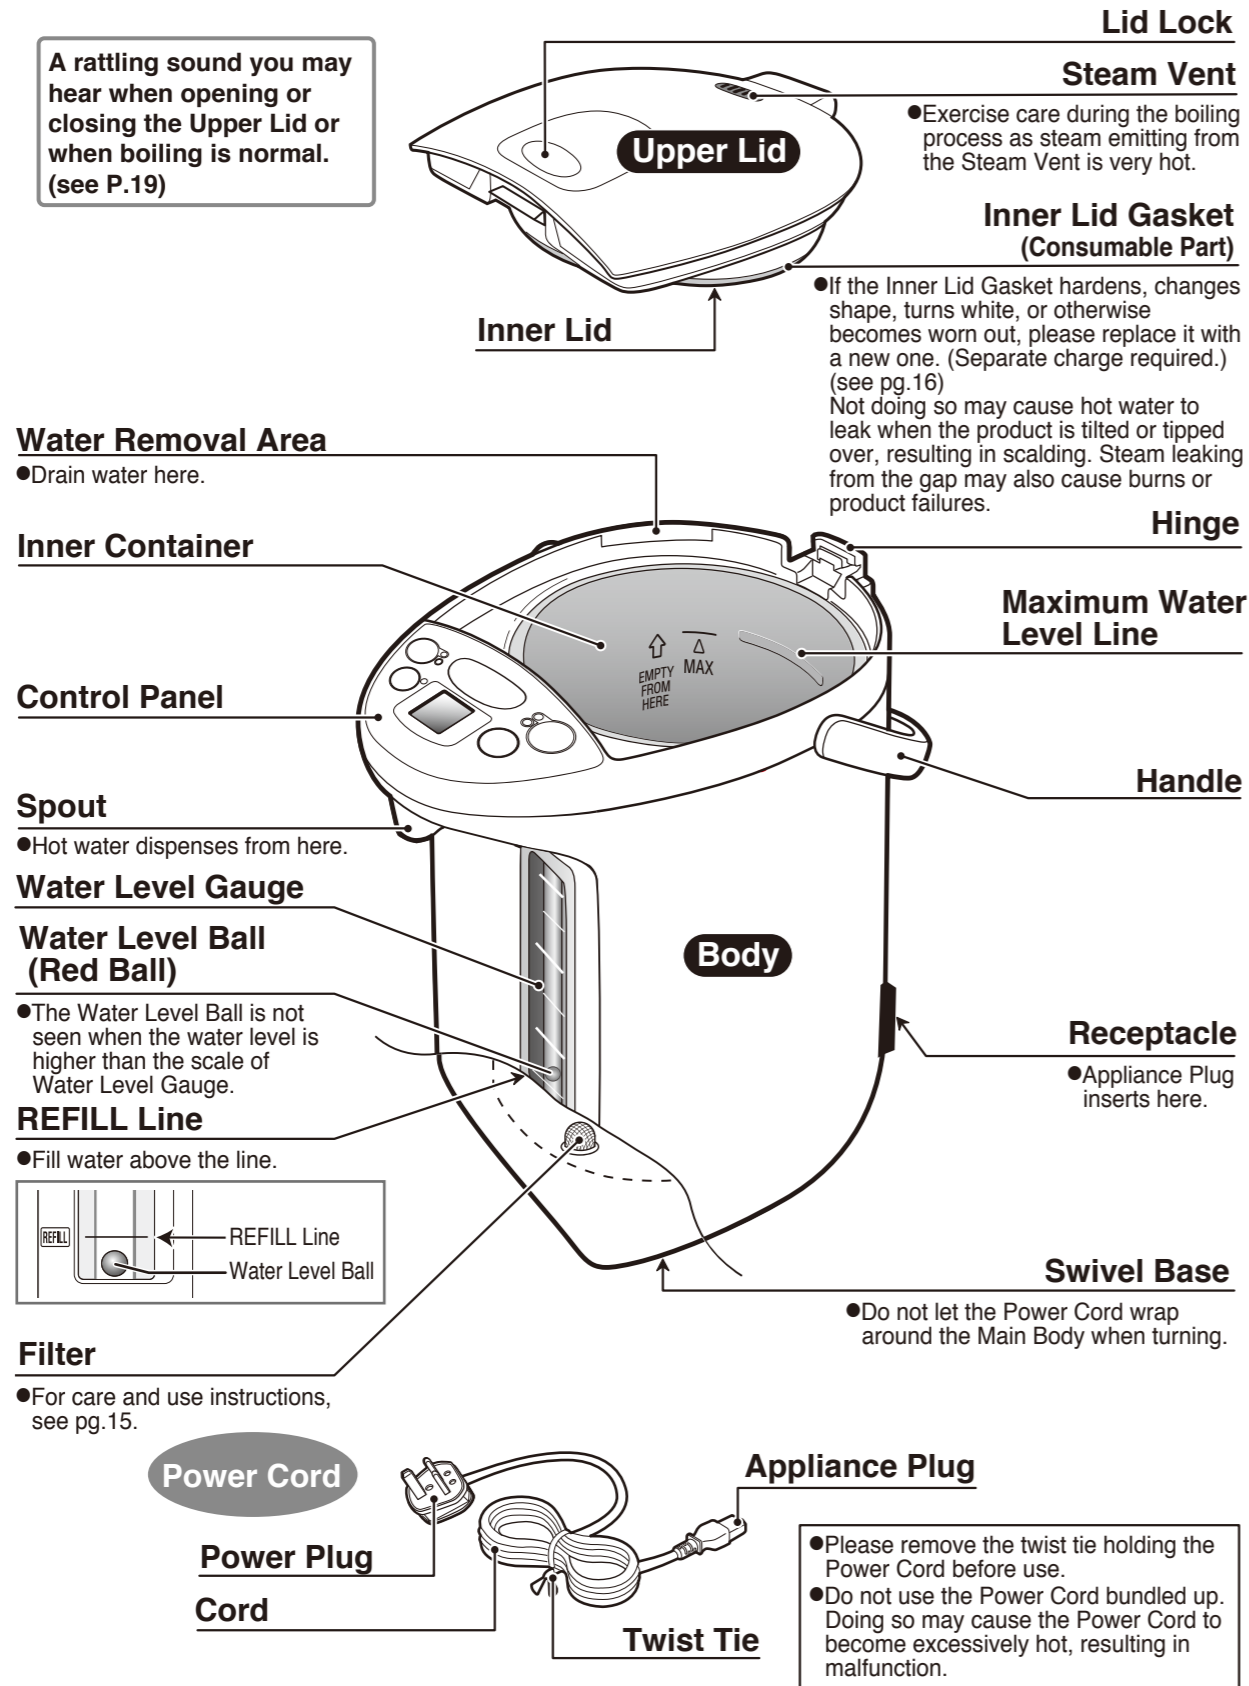

CONTROL PANEL

- Press buttons down firmly.
- The Sound Signals and raised dot (•) in the center of the DISPENSE button is provided for those with visual impairment.

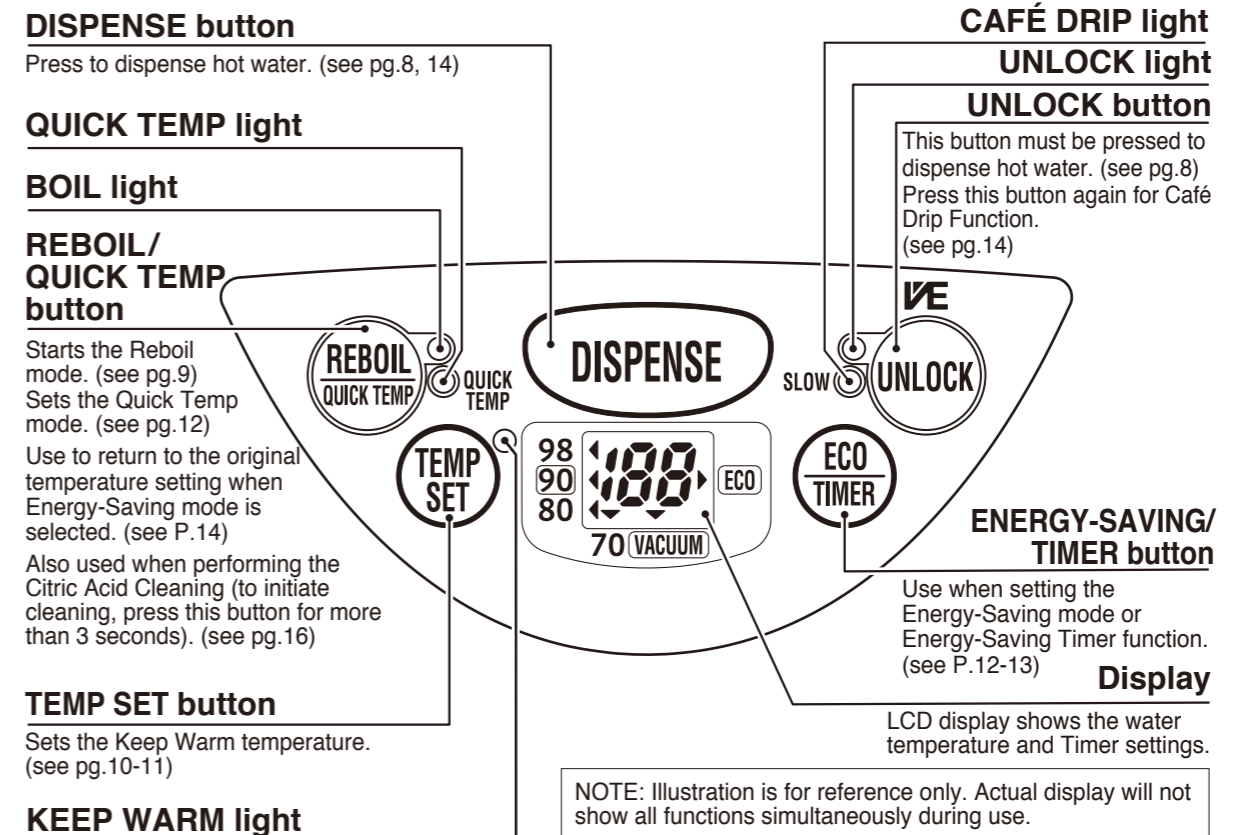


How to Open/Close the Upper Lid

To Open ① Press the indented area of the Lid Lock with your thumb.

② Pull the Lid Lock up with your fingers to open the Upper Lid.

To Close Depress the Upper Lid until it clicks shut.

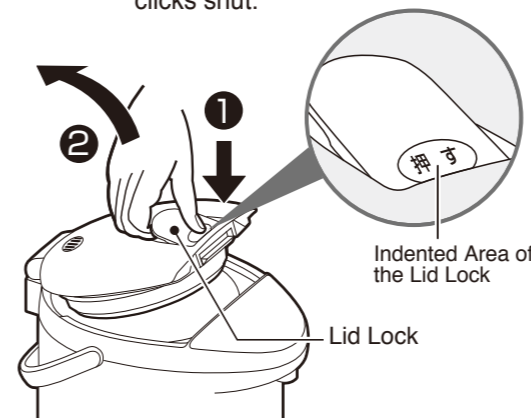


How to Detach/Attach the Upper Lid

To Detach ① Open the Upper Lid to about a 45-degree angle.

② Push the Upper Lid Detach button.


③ Pull the Upper Lid forward and up at an angle.

To Attach Push the Upper Lid back into place at the same angle.

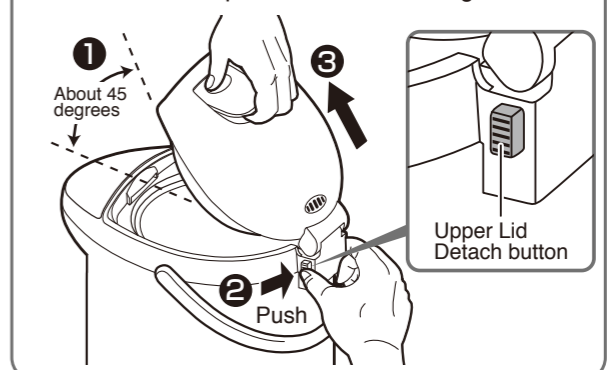


BOIL MODE

1 Open the Upper Lid and fill the Inner Container with water using a pitcher or other container.

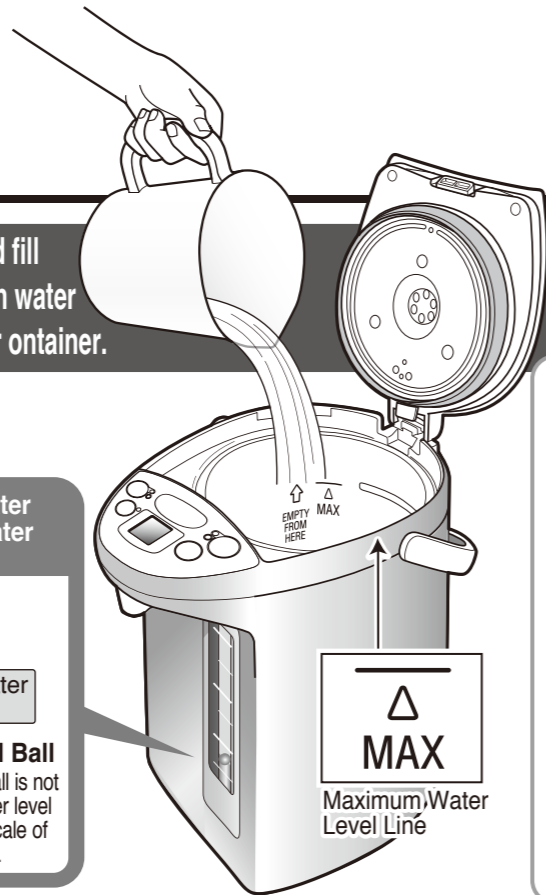


To monitor the amount of water you are filling, look at the Water Level Ball position.

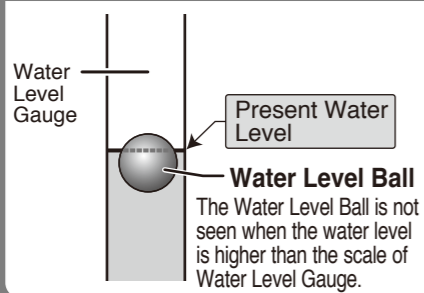

NOTE

- Do not fill the Inner Container directly from a water faucet or place the product on a wet surface such as a sink. (Exposing the heating element directly to water may cause malfunction.)
- Avoid splashing water on the Body or Control Panel. (May cause malfunction.)
- Before use, check the Inner Lid Gasket for any deformation. (May cause steam leakage.)

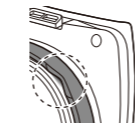

The first time you use the product you may notice the smell of plastic. This is normal and will gradually fade away.

● At your initial use or when using the product after a long period of storage:


Fill the Inner Container with water to the Maximum Water Level Line ($\frac{\Delta}{MAX}$), and boil water as directed. Once it reaches a boil, press the UNLOCK button, then press the DISPENSE button to dispense about 1 liter of hot water in order to rinse the water route, and dispose the remaining water. Fill with fresh water. (Always remember to attach the Filter.)

● When using mineral or Alkalized Ionic water:

When mineral or Alkalized Ionic water is used, a floating residue may develop or a milky white substance may form on the surface of the Inner Container. This is due to the ingredients in the water and is harmless to your health. Frequent cleaning is recommended.


- Do not fill over the Maximum Water Level Line. (Hot water may overflow from the Steam Vent.)
- Do not fill the Inner Container with hot water. (The Automatic Shut-Off function may be activated.) (see P.9)
- Do not fill the Inner Container with any liquid other than water.
- Do not use water additives such as charcoal for water purification or mineral additives. (Small particles may get clogged inside of the product.)
- If you wish to shorten the completion time, add less water to the Inner Container.

2 Close the Upper Lid and connect the Power Cord.

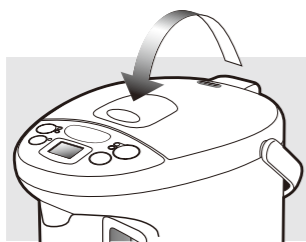

Close the Upper Lid securely.

(To ensure safe operation while boiling and to prevent scalds if the product is overturned.)

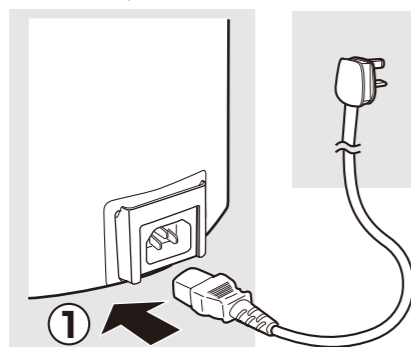


Be sure to insert the Power Cord securely. (Otherwise, may cause electric shock, short circuit, smoke or fire.)

NOTE

- Do not allow the end of the Appliance Plug to get soiled with dust or come into contact with metal objects such as pins.

It automatically starts the boiling process.


The BOIL light turns on and the Display shows the water temperature in 5°C increments.

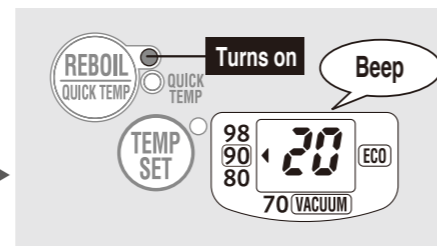

- How to set the Keep Warm mode: see P.10-11
- How to set the Quick Temp mode: see pg. 12

When boiling has completed, a melody sounds and it automatically switches to 90°C Keep Warm mode.

The BOIL light turns off, the KEEP WARM light turns on and "100" appears on the Display.

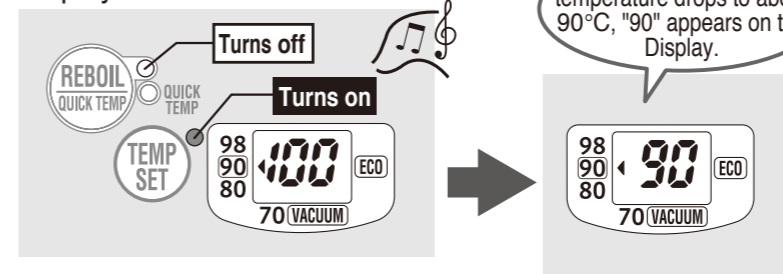

Time required to boil water:

Approx. 37 minutes*

(At a room temperature of 23°C with the Inner Container filled to the Maximum Water Level Line with water temperature at 23°C.)

* Includes approx. 4 minutes to Dechlorinate.

Length of time until the water temperature reaches about 90°C:

Approx. 1 hour and 10 minutes

(At a room temperature of 23°C with the Inner Container filled to the Maximum Water Level Line.)

- The length of time for the water temperature to reach 90°C will vary depending on the temperature of the room and water.

How to change the Information Sound from a melody to a beep. (see pg.14)

How to set the Keep Warm mode:


- 98°C Keep Warm Mode. (see pg.10)
- 80°C Keep Warm Mode. (see pg.10)
- 70°C Keep Warm Mode. (see pg.11)
- Vacuum Insulation (Non-Electric) Keep Warm Mode. (see pg.11)

NOTE

- Add water when the water level is low during the Keep Warm mode. (The product automatically begins heating the water.) If the water level is still not high enough, it will not automatically switch to Boil. In this case, press the REBOIL/QUICK TEMP button to manually start the process. (see pg.9)
- Please follow the instructions below to prevent the risk of scalding:
 - Do not cover the Steam Vent with a cloth.
 - Do not touch the Steam Vent or bring your hands or face near the Steam Vent.
 - Do not open the Upper Lid while the BOIL light is on.
 - Do not dispense hot water while it is boiling.

DISPENSE HOT WATER

1 Press the **UNLOCK** button.

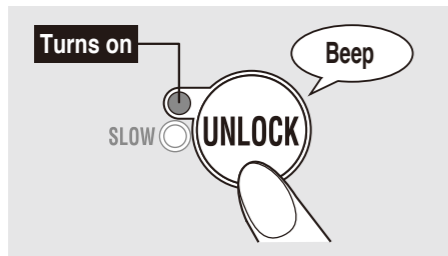

The UNLOCK light turns on and hot water can be dispensed.

NOTE


- Do not unlock and press the DISPENSE button if the Inner Container is empty.

2 Press the **DISPENSE** button to dispense hot water.



Do not swivel the product while dispensing water.

- Initially upon boiling or if it has been a while after dispensing, the water may not be very hot. Please discard the first cup (of the hot water).
- Do not attempt to dispense hot water while boiling.
- Water may not dispense smoothly for a short period of time after boiling.
- Be careful as the Body heats up during the Boil and Keep Warm modes.



10 seconds after dispensing, the UNLOCK light turns off and the Automatic Dispense Lock is activated.

Automatic Dispense Lock



- A safety function to prevent hot water from dispensing if the DISPENSE button is accidentally pressed.
- Even if no water is dispensed, the Automatic Dispense Lock will be activated after about 10 seconds.

Do not tilt or shake the product after dispensing. Hot water may drip from the Spout, causing scalds.

DISPOSE WATER

Dispose leftover water when the product is not in use.


1 Unplug the Power Cord and detach the Upper Lid.

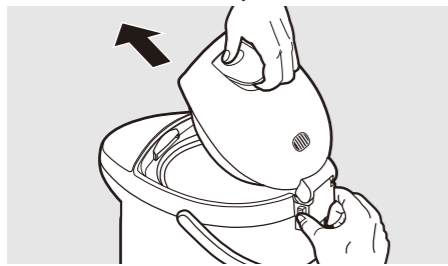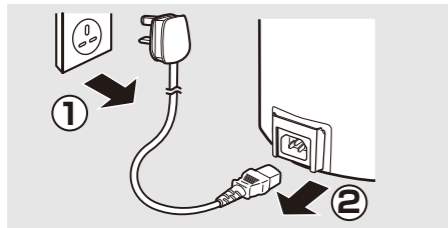

When detaching the Upper Lid:

- Take precaution with the steam. You may scald yourself.

2 Hold the product with both hands and dispose water where indicated "EMPTY FROM HERE" on the wall of the Inner Container.

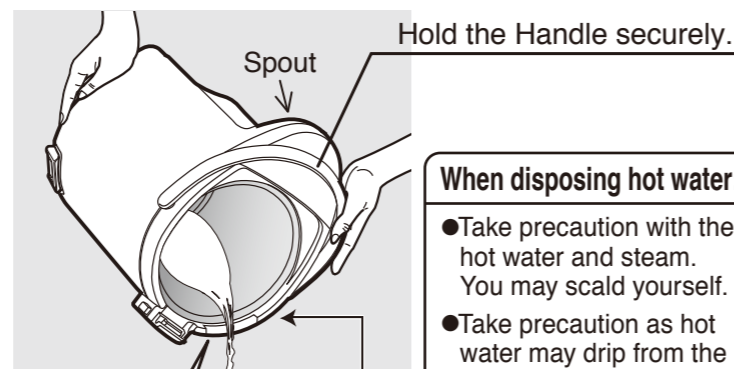

When disposing hot water:

- Take precaution with the hot water and steam. You may scald yourself.
- Take precaution as hot water may drip from the Spout, causing scalds.


NOTE

- Do not plug or unplug the Power Plug or Appliance Plug with wet hands. (Doing so may cause short circuit or electric shock.)
- Do not dispose hot water with the Upper Lid in place. (The Upper Lid may come off, spilling hot water and causing scalds.)
- Do not allow water to splash on the Control Panel, Hinge, Handle or Receptacle. (Could cause scalding or breakdown.)
- Take precaution as not attaching the Filter properly may cause it to fall out when dispensing hot water.
- Dispose the water at least once a day. (Leaving water in the Inner Container can cause unwanted odor or scale build-up.)

Reboil mode

This function is used when reboiling water in the Keep Warm mode.

Press the **REBOIL/QUICK TEMP** button. The BOIL light turns on when the boiling process begins.

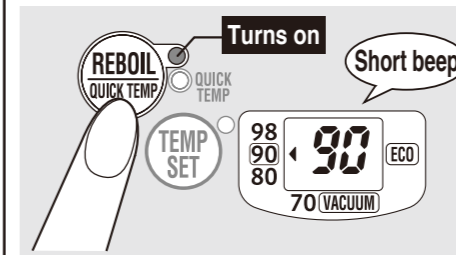

Time required to finish reboiling
(At a room temperature of 23°C with the Inner Container filled to the Maximum Water Level Line.)


98°C Keep Warm Mode
Approx. 3~4 minutes
90°C Keep Warm Mode
Approx. 5~8 minutes

When the Reboil process is completed, a melody sounds and the product switches to Keep Warm mode.

- Pressing the REBOIL/QUICK TEMP button twice activates the Quick Temp mode. (see pg.12)
- Do not attempt to dispense hot water while reboiling.
- Water may not dispense smoothly for a short period of time after reboiling.
- When the Energy-Saving mode is selected, you cannot activate the Reboil mode. To start the Reboil mode, cancel the Energy-Saving mode once, then press the REBOIL/QUICK TEMP button. (see P.12)

- NOTE**
- Make sure the water level is above the REFILL Line before pressing the REBOIL/QUICK TEMP button.

Automatic Shut-Off function

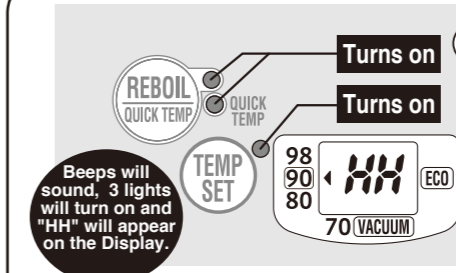

- Be careful not to repeat the boiling process without filling the pot with water, as the Non-Stick Coating may discolor and peel off.

The Automatic Shut-Off function activates to shut down power to the heater in order to prevent damage from overheating. The Display will show "HH" and beeps will sound to alert you that the Automatic Shut-Off has been activated. The following conditions may cause activation:


- When plugged in without filling the Inner Container with water.
- When the water level is lower than the REFILL Line and boiling has been attempted.
- When the Inner Container is empty or the Upper Lid is left open for adding water.
- When pouring in hot water immediately after plugging in the unit.

Remedy Unplug the product. Allow the Inner Container to cool. Fill the Inner Container with water and plug back in.

HOW TO SET THE KEEP WARM MODE

Press the **TEMP SET** button to change the settings.

Each press of the button changes the position of the "◀" on the Display.

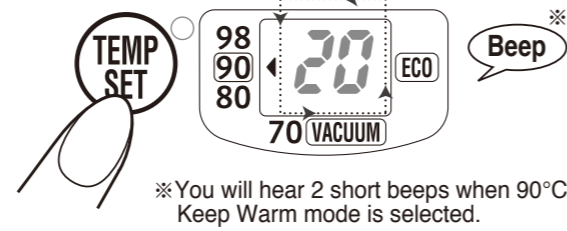

- You can change the temperature setting during Keep Warm mode. (It may start reboiling depending on the water temperature and the selected setting.)
- You cannot select the 98°C Keep Warm mode and Vacuum Insulation Keep Warm mode while the Quick Temp mode is selected.

If the Power Plug is detached while the Thermal Insulation Keep Warm mode is selected:


- Re-insert the Power Plug when the plug is detached by accident.
- If the plug is detached for more than a few minutes and be inserted, the pot returns to the Energy-Saving 90°C Keep Warm mode and it may start reboiling automatically.

For making coffee, tea and instant noodles


98°C Keep Warm Mode

98°C is ideal for making coffee, tea and instant noodles.

Select the "98" on the Display.

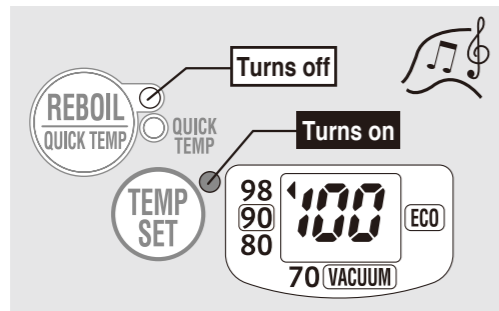

When the boiling process has completed, a melody sounds, the BOIL light turns off and the KEEP WARM light turns on.

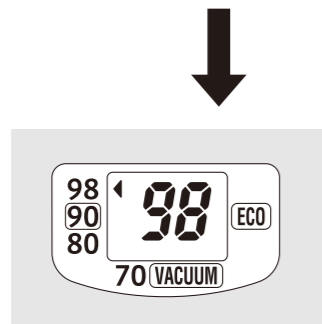

When the water temperature reaches 98°C, "98" appears on the Display.


- Depending on the altitude where the product is used, the Keep Warm mode may be set at 96°C-97°C, in order to prevent continuous boiling.

For making Japanese (green) tea

80°C Keep Warm Mode

80°C is ideal for making Japanese (green) tea.

Select the "80" on the Display.

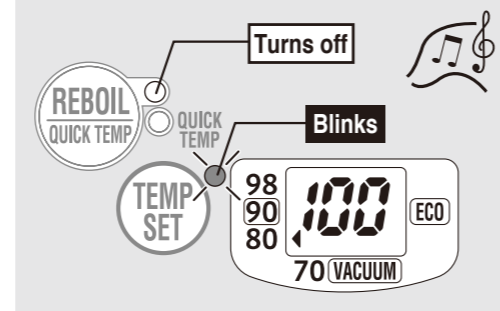

When the boiling process has completed, a melody sounds, the BOIL light turns off, and the KEEP WARM light begins to blink. (If initiated during Keep Warm mode, the light will blink 2 seconds after the selection.)

When the water temperature reaches about 80°C, "80" appears on the Display, and the KEEP WARM light stops blinking and remains on.

(When water is boiled in the Quick Temp mode, the KEEP WARM light does not blink but turns on. (see pg.12))

Length of time for the water temperature to reach 80°C after boiling:

Approx. 3 hours and 30 minutes

(At a room temperature of 23°C with the Inner Container filled to the Maximum Water Level Line.)

- The length of time for the water temperature to reach 80°C will vary depending on the room temperature and amount of water.

For preparing baby formula


70°C Keep Warm Mode

70°C is ideal for preparing baby formula.


Select the "70" on the Display.

When the boiling process has completed, a melody sounds, the BOIL light turns off, and the KEEP WARM light begins to blink. (If initiated during Keep Warm mode, the light will blink 2 seconds after the selection.)

- If you wish to shorten the time, add less water to the Inner Container.

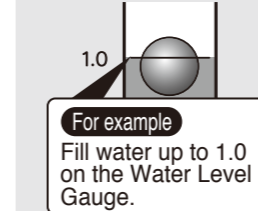

When the water temperature reaches about 70°C, "70" appears on the Display and the KEEP WARM light stops blinking and remains on.

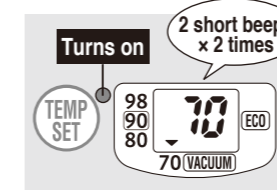

Length of time for the water temperature to reach 70°C after boiling:

1.0 L	Approx. 2 hours
4.0 L	Approx. 5 hours and 40 minutes

(At a room temperature of 23°C.)

- The length of time for the water temperature to reach 70°C will vary depending on the room temperature and amount of water.

When preparing baby formula:

70°C is ideal for preparing formula. **Dissolve the formula and let cool to optimum temperature (slightly higher than body temperature). If fed without cooling, babies are at risk of scalding.**


- Be sure to check that the KEEP WARM light is on and NOT blinking before dispensing.
- Do not use the Quick Temp mode. (see pg.12)

For saving electricity

Vacuum Insulation Keep Warm Mode

This mode saves electricity by shutting off the power to the heater after the boiling process is completed and keeps it warm by Vacuum insulation.

Select "VACUUM" on the Display.

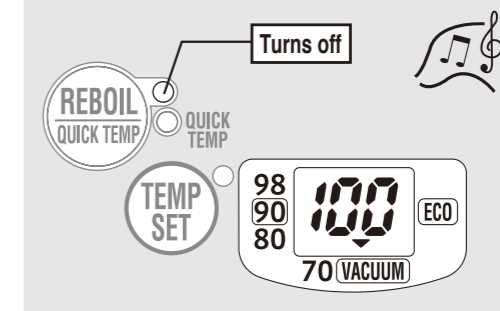

When the boiling process has completed, a melody sounds, and the BOIL light turns off.

Water temperature during VACUUM INSULATION Keep Warm Mode:

After complete boiling		
2 hours later	4 hours later	6 hours later
Approx. 92°C	Approx. 85°C	Approx. 78°C

(Temperatures are measured in the center of the Inner Container and are based on a room temperature of 23°C, with the maximum amount of water.)

- Temperature is measured in the center of the Inner Container. The water temperature in the upper and lower area will differ as time pass, and the temperature in the center is measured as the average.
- As the water temperature drops, the display temperature may be lower than actual when the Vacuum Insulation Keep Warm mode is selected.
- The lower the amount of water, the faster the temperature will drop.
- During the Vacuum Insulation Keep Warm mode, the product will not automatically start reboiling. To resume boiling, manually press the REBOIL/QUICK TEMP button.

QUICK TEMP MODE


This function heats the water to the Keep Warm temperature setting without reaching a boil.* The water will reach the Keep Warm temperature setting quicker. As compared to the regular Boil mode, the function shortens the boiling time, suppresses steam generation, and helps save energy.

The Quick Temp mode is unable to boil and dechlorinate water. Set this mode for potable water.

*At the 70°C Keep Warm mode only, water is heated once to approx. 80°C and then kept warm at approx. 70°C. The length of time for the water temperature to reach approx. 70°C. 1 hour after boiling. (At a room temperature of 23°C with the Inner Container filled to the Maximum Water Level Line.)

While the water is heating, press the **REBOIL QUICK TEMP** button to select the Quick Temp mode.


You cannot activate Quick Temp mode while the product is set at 98°C Keep Warm mode or Vacuum Insulation Keep Warm mode.

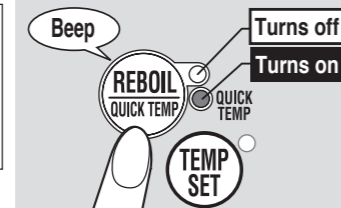

After reaching the selected temperature, it will automatically switch to Keep Warm.

(The QUICK TEMP light turns off and the KEEP WARM light turns on.)

At the 70°C Keep Warm mode, after the KEEP WARM light blinks, two short beeps will sound and the KEEP WARM light will turn on.



- The Quick Temp mode may be canceled if the Power Cord is detached. Set to the desired mode again.
- The product begins the Regular Boil mode when water is added. Activate the Quick Temp mode again.
- You cannot select 98°C Keep Warm mode or Vacuum Insulation Keep Warm mode while Quick Temp mode is activated.
- There may be a lingering chlorine smell if tap water is used while Quick Temp mode is activated. If this is an issue, use the regular Boil mode instead.
- Depending on the amount of water and room temperature the actual water temperature after heating may differ from that shown on the Display.
- Depending on the amount of water, room temperature, and atmospheric pressure, some steam may be produced.

NOTE


- Water does not reach a boil under Quick Temp mode, and should not be used to prepare baby formula.
- Although the water will not reach a boil when Quick Temp mode is activated, the Steam Vent will become hot. Please do not touch it.

ENERGY-SAVING MODE / ENERGY-SAVING TIMER FUNCTION

Press the **ECO TIMER** button, and set either Energy-Saving mode or Energy-Saving Timer function (6 hours to 10 hours).

- It is unable to use the Energy-Saving mode with Energy-Saving Timer function.

Energy-Saving Mode

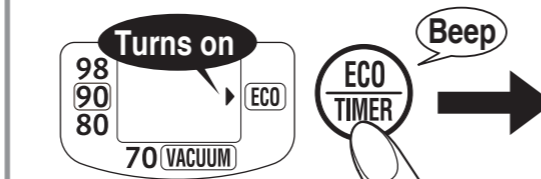

For approx. 2 seconds after selecting the Energy-Saving mode, the temperature display turns off.

Energy-Saving while waiting

When operation is not confirmed for continuously approx. 2 hours

- The REBOIL / QUICK TEMP button is rejected in Energy-Saving standby mode.

Energy-Saving starts.

After automatically shutting off electricity to the heater, water is kept warm at approx. 70°C.

When water is heated to the original temperature setting


Press the **REBOIL QUICK TEMP** button.

After water is heated to the temperature setting, the setting returns to the Energy-Saving standby state.


- When the water temperature is lower than the temperature setting, the BOIL light turns on and water is heated to the temperature setting. After completing boiling, the hot water may become higher than the temperature setting.
- When the water temperature is higher than the temperature setting, water is not boiled when the REBOIL / QUICK TEMP button is pressed.

Each press of the Energy-Save/Timer button changes the mode and set time. When operation is not confirmed for approx. 2 seconds, the displayed settings is activated.

In the case of 98°C Keep Warm mode, 90°C Keep Warm mode, and 80°C Keep Warm mode

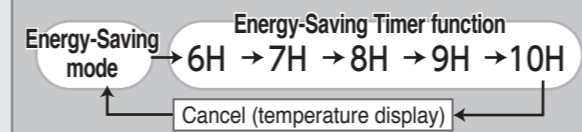


In the case of 70°C Keep Warm mode and Vacuum Insulation Keep Warm mode

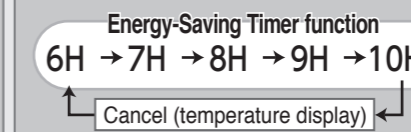

You cannot select the Energy-Saving mode while 70°C Keep Warm mode or Vacuum Insulation Keep Warm mode is activated.

When operation is not confirmed for approx. 2 hours, the Energy-Saving mode helps save energy by automatically shutting off electricity to the heater and keeping water warm at approx. 70°C.

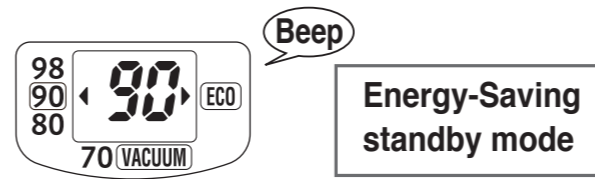

When the Energy-Saving mode is fixed, the temperature display turns on.

How to cancel the Energy-Saving mode

Press the **ECO TIMER** button once.

Further,

When the Energy-Saving Timer function is re-selected


Press the **ECO TIMER** button several times to set the timer to the desired time.

The following cases, too, cancel the Energy-Saving mode.

- When 70°C Keep Warm mode or Vacuum Insulation Keep Warm mode is chosen in the Energy-Saving mode.
- Water may not be dispensed smoothly for a while after heating to the Keep-Warm temperature setting. The temperature shown on the Display after heating may differ from the Keep-Warm temperature setting.
- The product automatically begins heating the water by adding water. If the water level is still not high enough, it will not automatically switch to Boil. In this case, cancel the Energy-Saving mode, then press the REBOIL / QUICK TEMP button.

Energy-Saving Timer Function (6H~10H)

The Boiling function will complete after the set time. (The Energy-Saving Timer function helps save energy by shutting off electricity to the heater until boiling begins.)

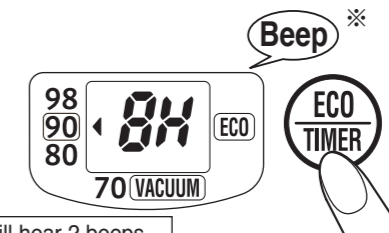

*You will hear 2 beeps when 6H is selected.

A melody sounds and the Energy-Saving Timer function is activated.

The Boiling function will complete at the set time.

The BOIL light turns off and the KEEP WARM light turns on.

Boiling may stop earlier than set, depending on room temperature, water temperature and amount of water.

- When using the Energy-Saving Timer function with the Quick Temp mode, set the Quick Temp mode after selecting the Energy-Saving Timer function

How to cancel Energy-Saving Timer function

Press the **ECO TIMER** button several times.

Or

Press the **REBOIL QUICK TEMP** button once.

If the Power Cord is detached:

If the Power Cord is detached, the Energy-Save Mode/Energy-Save Timer function will be cancelled and must be reset.

CAFÉ DRIP FUNCTION

This function decreases the amount of water dispensed to 60% of the normal setting, making it suitable for brewing café drip coffee.

1 Press the **UNLOCK** button twice.


When the CAFÉ DRIP light turns on, Café Drip Function is activated.



- Pressing the UNLOCK button again during Café Drip Function will reset the product to the normal dispensing mode.
- When the light turns off, the Automatic Dispense Lock will be activated.
- If the water level is low, it may take longer for water to begin dispensing after pressing the DISPENSE button.
- If the water level is low or boiling has just completed, water may not dispense smoothly.

2 Press the **DISPENSE** button to dispense hot water.

You can use the Café Drip Function for about 60 seconds while the CAFÉ DRIP light is on.

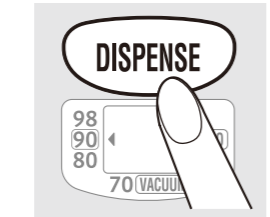


- NOTE**
- Be careful not to burn yourself.
 - If using a cone filter placed directly on a cup, be careful not to let it fall inside the cup while brewing.
 - When using a manual drip coffee cone, dispense a cup of hot water before brewing. (The first cup may not be hot enough.)

HOW TO CHANGE THE INFORMATION SOUND

- **Information Sound:** The product informs you with a melody or beeps that it has finished boiling or the timer has been set.

1 Press the **UNLOCK** button for more than 3 seconds during the boiling process or Keep Warm mode.

● Each button press changes the Information Sound.

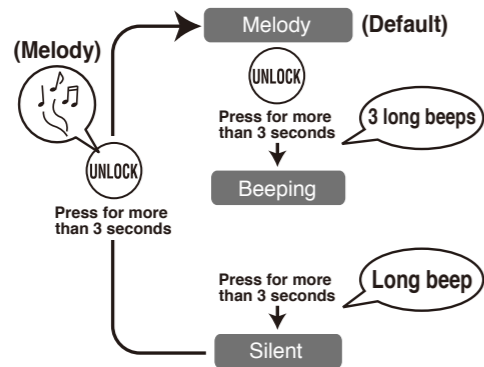

2 Once your desired sound (melody or beep) is heard, the setting is completed.

- If the Silent setting is selected, a beep will indicate the setting has completed.
- The Information Sound will return to Melody if the product is unplugged.

When and what types of Information Sounds are heard:

Type	Melody	Beeping	Silent
When			
Boiling stops	Minuet	5 long beeps	×
Timer is set	Beautiful Dreamer	×	×

CLEANING AND MAINTENANCE

Always unplug the Power Cord, dispose all water, and allow to cool completely before cleaning.

- NOTE**
- Do not attempt to dry the product by turning it upside down when the bottom is wet. (Water may get inside the body and cause it to break or rust.)
 - Do not use the following:
 - Thinner, benzene and bleach. (Doing so may cause discoloration, crack, degradation and corrosion.)
 - Polishing powder, nylon brushes, anything made with metal, eraser pads, hard nylon sponges and abrasive cleaners. (Doing so may cause corrosion.)
 - Detergent. (Hot water may spill out, resulting in scalds or damage. Doing so may cause unwanted odor.)
 - Do not use scrub brushes for any portions other than the Filter. (Doing so may cause corrosion.)
 - When using chemically treated cloths, do not rub too hard or leave them on the product for a long time as the surfaces of the product may be damaged by chemical reactions.
 - Do not use a dishwasher or dish dryer for cleaning or drying. (Doing so may cause the plastic parts to deform.)
 - Before storing the product for a longer period of time, dry it completely and pack in a plastic bag to prevent odors from being absorbed.

- Inner Lid:** Wipe with a soft wet sponge.
- Inner Container:** Perform the Citric Acid Cleaning (see pg.16) periodically.

Especially when...

 - Red rust spots (Rust Stain) is visible on the Inner Container.
 - Milky white or gray discoloration and/or filmy objects are found in the water.
 - Boiling is louder than usual.
 - Hot water has an odor. (The condition of the Inner Container will vary depending on the water quality and frequency of use.)
- Filter:** Remove the Filter from the Inner Container and wash with a soft brush.

Pull the Filter up to release, and press down firmly to attach. If you find it difficult to clean the Filter, replace it with a new one. (see pg.17)

 - Never use the product without installing the Filter. (The Filter prevents foreign objects from entering the water route or Electric Pump and obstructing the flow of hot water.)
- Power Cord:** Wipe clean with a dry cloth.
- Body/Upper Lid:** Wipe clean with a damp well-wrung cloth.
 - Do not wash any part of the Body, Control Panel or Water Level Gauge with water. (May cause malfunction or rust.)

HOW TO REPLACE THE INNER LID GASKET

The Inner Lid Gasket may need to be replaced due to time and wear. We recommend that you replace it about once a year.

Wipe new Inner Lid Gaskets with a wet soft sponge before attaching to the Inner Lid.

To remove the Inner Lid Gasket


- 1 Remove the three screws, and remove the Inner Lid.
 - Do not lose these screws.
- 2 Remove the Inner Lid Gasket which is installed on the Inner Lid.

After removing the Inner Lid, check the plastic part of the Upper Lid for abnormalities. → If this part is discolored or if it feels rough to the touch, replace it (there will be a fee for this).

To attach the Inner Lid Gasket

- 1 Fit the Inner Lid Gasket securely to the outer circumference as shown in the figure.
- 2 Place them correctly onto the Upper Lid and tighten the screws securely.

If the Inner Lid Gasket hardens, changes shape, turns white, or otherwise becomes worn out, hot water may leak from the gap between the Upper Lid and Body when tilted. Steam may also leak from the gap, causing burns and product failures, which may result in scalds. If hot water spews from the gap or there is steam even after replacing the Inner Lid Gasket, other parts may be in need of repair. Please contact the store where you purchased the product.

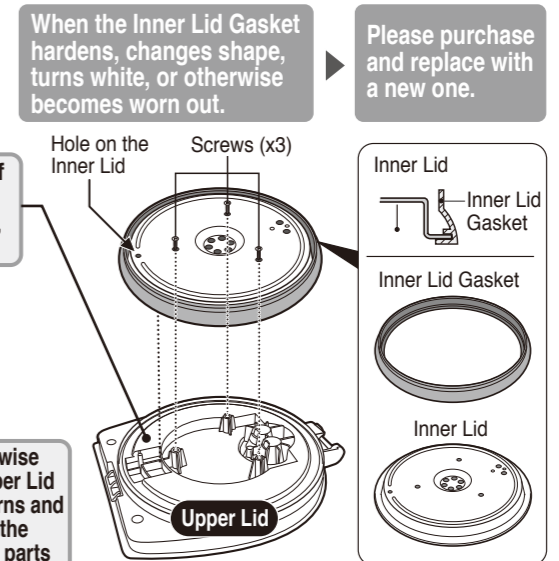

Perform every 1-3 month(s) of usage


HOW TO PERFORM CITRIC ACID CLEANING

Do not drink the water used for citric acid cleaning.

NOTE In order to prevent gas bubbles and bubbling-over, the Citric Acid Cleaner for Electric Water Boilers (CD-K03E-JU) is recommended for cleaning. To purchase this cleaner, please visit an authorized Zojirushi dealer.

Preparation:

Check that the Filter is attached to the Inner Container.

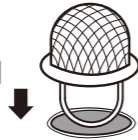

NOTE

●If the Filter is dirty, remove it from the Inner Container, wash with a soft brush and reinstall.


1 Put 1 package of the Citric Acid Cleaner CD-K03E-JU in a cup and add warm water to dissolve. Pour it into the Inner Container and fill with water to the Maximum Water Level Line.

NOTE


●Do not fill over the Maximum Water Level Line. (Hot water may spill out, resulting in scalds.)

2 Close the Upper Lid, insert the Power Plug and press the **REBOIL QUICK TEMP** button for more than 3 seconds.

Beeps when the cleaning process begins.

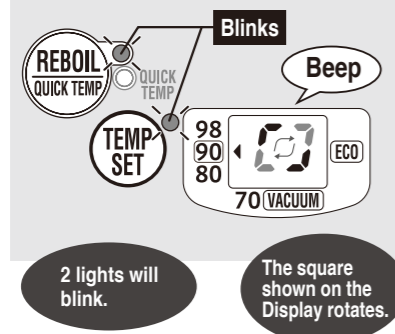

Beeps when the cleaning process is completed.

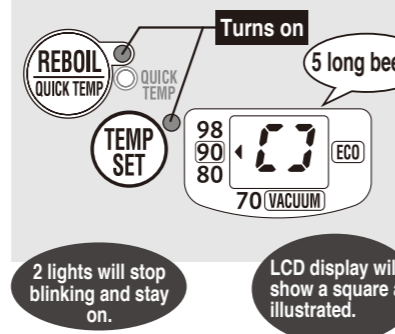

Cleaning time: Approx. 1.5 hours.

※Cleaning times may vary depending on the amount of water, water temperature and room temperature.

3 Unplug the Power Plug, detach the Upper Lid and dispose water where indicated "EMPTY FROM HERE." (Please take precautions not to splash water on the Hinge.)

When disposing hot water:

- Take precaution with the hot water and steam. You may scald yourself.
- Take precaution as hot water may drip from the Spout, causing scalds.

4 To rinse, fill the Inner Container with water. Boil and dispense about a cup of hot water to rinse out the Spout, allow to cool, then dispose the remaining water.

●If mineral or Alkalized Ionic water is used, calcium tends to build up on the surface of the Inner Container. If scale accumulates on the Inner Container or the Filter, boiling may become louder than usual and water may not dispense smoothly. Frequent cleaning is recommended when using mineral or Alkalized Ionic water.

To cancel the Citric Acid Cleaning at any time, unplug the Power Plug for more than 5 seconds.

NOTE

●Repeated citric acid cleaning may be necessary for hard-to-remove residues or if water does not dispense smoothly.

REPLACEMENT PARTS

- Replacement parts may be available for an additional charge. Please replace damaged parts only with new parts.
- When replacing parts, please record the model number and part name beforehand. Then contact the retail store where you purchased this product.

Parts Names	Parts Number
Inner Lid Gasket	625702-00
Filter	BF297053G-00
Citric Acid Cleaner for Electric Water Boilers (30g × 4 packets)	CD-K03E-JU

Q&A ON PRODUCT USE

Is it okay to use the product for heating liquids other than water?	Do not fill the product with any liquid other than water. It may cause malfunction, or may overflow and cause scalding.	▶ P.2
Does the water need to be changed every day?	To prevent scale from building up, please change the water at least once a day.	▶ P.8
Is it okay to use mineral water or Alkalized Ionic water?	Yes. However, when mineral or Alkalized Ionic water is used, a floating residue may develop or milky white substance may form on the surface of the Inner Container. This is due to the ingredients in the water and is harmless to your health. Frequent cleaning is recommended.	▶ P.7 ▶ P.16
I accidentally drank water while performing the Citric Acid Cleaning. Is this harmful to my health?	Please follow the instructions shown on the package of the citric acid cleaner CD-K03E-JU.	
Is it okay to go out while the product is turned on?	It is safe to use the product unattended as it has an Automatic Shut-Off function (power to the heater will be automatically turned off), which will be activated once it is empty of water. However be careful not to repeat the boiling process without filling the Inner Container with water, as the Nonstick Coating may discolor and peel.	▶ P.9




TROUBLESHOOTING GUIDE

Please check the following points before calling for service.

Condition	Cause	Remedy
Water does not heat up.	Power Plug is not connected to an electrical outlet.	Connect the Power Plug.
Hot water has a disagreeable odor.	Scale or other residue has accumulated on the Inner Container.	Perform citric acid cleaning. (see pg.16)
	You have not performed citric acid cleaning regularly.	
● A mild plastic odor may be noticeable with a new product. This odor will gradually fade away. ● You may smell chlorine (used for sterilization of tap water) after boiling.	The product has not been used for a long time.	Boil water, unlock and dispense about 1 liter of hot water. Discard the remaining. (see pg.7)
	If tap water is used under Quick Temp Function, it will take an additional 15 minutes after heating completes at the set temperature removing up to 80% of the chlorine.	If this is an issue, use the regular Boil mode instead. (see pg.12) The regular Boil mode purges chlorine in tap water by boiling completion.

TROUBLESHOOTING GUIDE (cont.)

Condition	Cause	Remedy
Water does not boil.	The Quick Temp mode is selected. (Water does not reach a boil under Quick Temp mode.)	Press the REBOIL/QUICK TEMP button, select the regular Boil mode. (see P.12)
Water pours out by itself from the Spout or Steam Vent.	Check that the Inner Container is not filled over the Maximum Water Level Line.	Pour out the excess water until it is below the Maximum Water Level Line.
The Quick Temp mode cannot be selected.	Is the 98°C Keep Warm mode or Vacuum Insulation Keep Warm mode selected?	Select the 90, 80 or 70°C Keep Warm mode, then select the Quick Temp mode. (see P.12)
The 98°C Keep Warm mode or Vacuum Insulation Keep Warm mode cannot be selected during the Quick Temp mode.	You cannot select the 98°C Keep Warm mode and Vacuum Insulation Keep Warm mode during the Quick Temp mode.	Use the Quick Temp mode for other than 98°C Keep Warm mode or Vacuum Insulation Keep Warm mode. (see P.12)
Steam is produced from the pot at the Quick Temp mode.	<ul style="list-style-type: none"> The Quick Temp mode prevents the water in the pot from boiling. However, steam may be produced, depending on the room temperature, amount of water, and atmospheric pressure. 	
Water cools easily during Vacuum Insulation Keep Warm mode.	The amount of water kept warm is too low.	Add water (below the Maximum Water Level Line) and press the REBOIL/QUICK TEMP button.
Water does not dispense or does not pour properly.	Hot water does not pour properly a few minutes after boiling.	Bubbles form from the bottom of the Inner Container while water is being heated. Dispense hot water after the bubbling stops.
	Scale or other residue has accumulated on the Inner Container and Filter.	Clean the Inner Container and Filter. (see P.15)
	The Automatic Dispense Lock is activated.	Press the UNLOCK button, then press the DISPENSE button. (see P.8)
	Power Plug is not connected to an electrical outlet.	Connect the Power Plug.
A filmy, floating residue is noticeable. (Could the Nonstick Coating be peeling off?)	Scale may build up in the water route or Electric Pump and prevent water from dispensing smoothly.	Perform citric acid cleaning. (see P.16)
	Residue is due to the mineral content in water, not from corrosion of the Inner Container or peeling of the Nonstick Coating.	<p style="text-align: center;">Scale</p> <p>Over time and use, calcium and other minerals contained in water build up on the surface of the Inner Container and the Filter. It is called "scale" and is harmless to your health.</p>
Milky white and rough-surfaced objects have built up on the surface of the Inner Container.	Excessive accumulation of scale and other build-up on the surface of the Inner Container can cause boiling to become louder.	
Boiling is louder than usual.		
Red rust-like spotting appears on the surface of the Inner Container.	Caused by iron in the water, not deterioration of the Inner Container.	
A white floating residue is noticeable.	Remove the Inner Lid and check the plastic part of the Upper Lid for abnormalities. (see P.15)	If this part is discolored or if it feels rough to the touch, replace it.

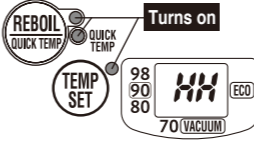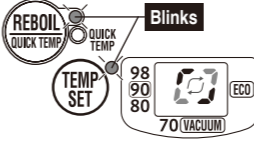Condition	Cause	Remedy	
Water is not hot.	Initially upon boiling or if it has been a while after dispensing, the water may not be very hot due to water remaining in the Water Level Gauge.	Please discard the first cup (of the hot water).	
	Is the Vacuum Insulation Keep Warm mode selected? If yes, then power to the heater has been turned off, causing the water temperature to gradually drop.	Press the REBOIL/QUICK TEMP button. (see P.11, 14-15)	
Is the Energy-Saving mode or Timer set?			
The Body becomes hot.	<ul style="list-style-type: none"> When the water temperature and/or room temperature is high, the outer surface of the Body may reach up to 60°C. This is not a malfunction. 		
The Power Cord becomes hot.	<ul style="list-style-type: none"> The Power Cord may become hot while the water is boiling. This is not a malfunction. 		
You hear a rattling sound when opening and closing the Upper Lid or when boiling.	<ul style="list-style-type: none"> This sound is normal and comes from the movement of the weight which prevents hot water from flowing out when the product is overturned. 		
Humidity builds in the Display window.	<ul style="list-style-type: none"> If water is filled from a faucet or the product is placed directly on a sink and the bottom becomes wet, water may go inside of the Body and the Display may show moisture. This may cause short-circuiting or electric shocks, unplug the Power Cord and contact our authorized service center. 		
Error Displays and their meaning	 <p>Turns on</p> <p>A beep sounds, 3 lights turn on and "HH" appears on the Display.</p>	<p>The Inner Container is low on water or hot water was added to the Inner Container, causing the Automatic Shut-Off function to engage.</p>	Unplug the Power Plug and wait until the Inner Container cools down. Add water and plug in the Power Cord. (see P.9)
	 <p>Blinks</p> <p>2 lights blink at the same time and the Display shows a rotating square.</p>	<p>You pressed the REBOIL/QUICK TEMP button for 3 seconds or more. The Inner Container is in a citric acid cleaning cycle.</p>	To cancel the citric acid cleaning cycle, unplug the Power Plug and wait more than 5 seconds before plugging back in. (see P.16)
	 <p>E2, E3 or E4 is displayed.</p>	Indicates malfunction.	Please contact the retail store where you purchased this product.
Replacement for the Upper Lid	Inner Lid Gasket	<ul style="list-style-type: none"> The Inner Lid Gasket is replaceable, and we recommend that you replace it about once a year. If steam leaks from the gap between the Upper Lid and the Body, or if the Inner Lid Gasket hardens, changes shape, turns white, or otherwise becomes worn out, please replace it. (see P.15) 	
	Plastic Parts	<ul style="list-style-type: none"> The plastic part of the Upper Lid may deteriorate over use. When replacing the Inner Lid Gasket, check the plastic part. If discoloration occurs or the surface becomes coarse, replace the Upper Lid (must purchase separately). (We take care in only using materials for the plastic parts that are safe and hygienic for food contact.) 	
<p style="text-align: center;">The Nonstick Coating of the Inner Container may become damaged over use. Contact the retail store where you purchased this product.</p>			